


# How to use the USB memory device included with your Opus radio

This document describes how to plug in and play the USB memory device included with your Opus radio. A recording on this USB memory device explains the position of the controls and the functions of your radio in detail.


## Using the radio for the first time

1. Place your radio on a flat surface.
2. Carefully extend the telescopic aerial located in the top right hand corner of your radio.
3. Plug the mains adaptor into the **DC input socket** located on the rear of your radio (marked DC In) ensuring that the plug is pushed fully into the socket.
4. Plug the other end of the mains adaptor into a standard mains socket outlet and switch on the wall socket.
5. The display on the radio will briefly show a start up screen. During this time the radio is scanning to find a DAB radio signal. After a short time the current time and day will appear on the display.
6. Press the **On/Off button** to switch on your radio. The radio will beep to confirm that it is now switched on.
7. When first switched on your radio will be in DAB mode. If this is the first time the radio has been used a scan of the Band III DAB channels will be carried out (depending on whether scanning was completed in standby mode).

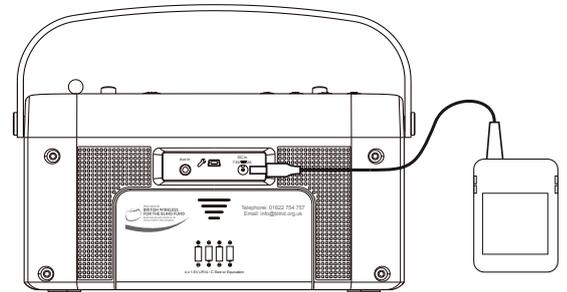

09:30  
03-JAN-2018

On/Off

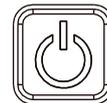


DAB radio

Scanning 28  
■■■■■■■■

## Plugging in the USB memory device

1. Carefully insert the USB memory device included with your radio into the **USB socket** on the top of your radio. The USB device will only fit into the socket one way.
2. Press the **USB button** marked with a raised letter **U** to select the USB mode.
3. The display will show 'USB' then 'USB Reading...'. The number of files and folders will be displayed.
4. For playback from the USB memory device please see overleaf.

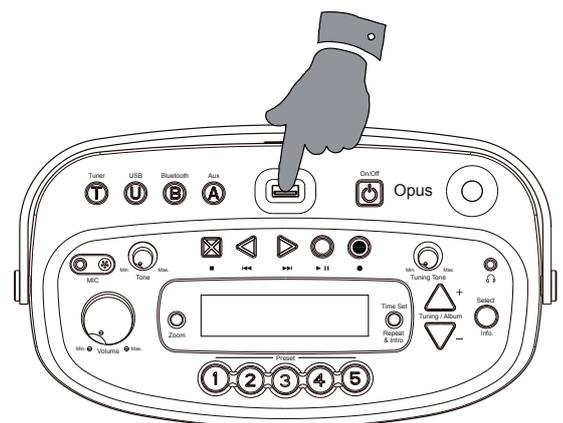

USB




USB Reading...

Continued overleaf...

## Locate the five media playback buttons

1. The five media playback buttons are located in front of the USB playback socket.
  - The first media playback button on the left is the **Hold/Stop** button marked with a raised cross which is used for the Bookmark or the stop function.
  - The next playback button on the right is the **Previous/Rewind** button which is marked with a raised left arrow.
  - The next button to the right is the **Next/Fast-forward** button which is marked with a raised right arrow.
  - The next button to the right is the **Play/Pause** button which is marked with a raised empty circle.
  - The last button on the right is the **Record** button which is marked with a raised solid circle.

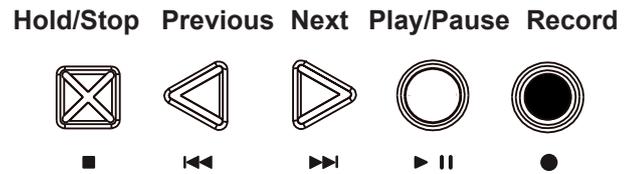

## Playing the USB memory device

1. To start USB playback press the **Play/Pause button** which is marked with a raised empty circle. Adjust the large rotary volume control which is located on the top panel on the left hand side as needed.
2. Press the **Play/Pause button** again to pause playback. To resume playback press the **Play/Pause button** again.
3. Your Opus radio has a Bookmark facility which will allow you to stop playback of the USB and then continue playback from the same point at a later time even if you change mode or put the unit into standby.
4. To use the Bookmark facility whilst the USB is playing, press the **Hold/Stop** button once. The Hold/Stop button is the first media playback button on the left which is marked with a raised cross. 'Resume' will show on the display. To continue playback ensure you have the USB mode selected and press the **Play/Pause** button.
5. To stop the USB playing completely, press the **Hold/Stop** button twice. The number of files and folders will be displayed.

